

VI.5.3D-PRINTSMA PROGRAM FCST HCL TECHNIQUE PRINTSMA

Purpose

Technique PRINTSMA sets whether detailed print output is to be generated by rainfall-runoff model Operations.

Currently Operations API-CONT, SAC-SMA and XIN-SMA can generate detailed print output.

Valid values are NO (0), YES (1) and criteria (2).

The Global default value is NO (0).

This Technique is Nonuniversal.

Form of Input

PRINTSMA(integer)

where integer is 0, 1 and 2 specifying whether to:

0 = do not print

1 = print

2 = rely on criteria in the Operations to determine whether or not to print

Example

PRINTSMA(0) (<JOPMO>)

Print output will be generated from the rainfall-runoff model Operations in all Segments except JOPMO.

PRINTSMA(1) (WTT02)

Print output will be generated from the rainfall-runoff Operations in Segment WTT02.